




OMSID # 205703198
Model # THD339414.2a

USE AND CARE GUIDE

Elite Base 2-Door With Drawer-Espresso

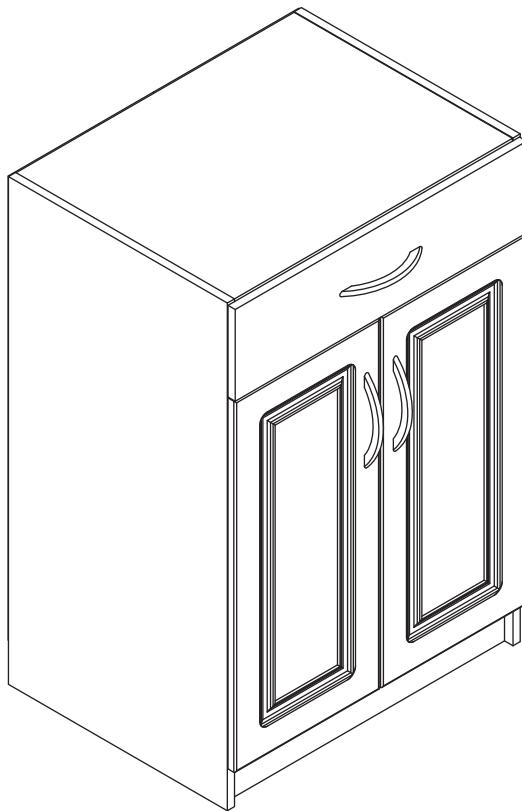

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 6 p.m., EST, Monday - Friday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this bookcase. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents	2	Planning Assembly	3
Safety Information	2	Tools Required	3
Warranty	2	Hardware Included	3
Pre-Assembly	3	Package Contents	4
		Assembly	5
		Weight Limits	11

Safety Information

Read and understand all instructions before assembly.

Warranty

LIMITED ONE YEAR PRODUCT WARRANTY

WHAT IS COVERED

This limited warranty covers the original purchase of this product used for normal commercial, personal, or household use. The supplier warrants its products will be free from defects in materials and workmanship (normal wear and tear excepted) for a period of one (1) year from the date of purchase, except as provided below. The supplier, at its option, will replace with a comparable product, free of charge, any product purchased from it that fails under normal use as a result of such defect.

Materials are warranted for one year from date of purchase. Proof of purchase is required in the form of a receipt (copy or original) to validate the warranty.

The supplier provides this limited warranty in lieu of all other warranties either expressed or implied. Expressly excluded are all warranties of fitness for a particular purpose or merchantability. The supplier's sole obligation and the user's exclusive remedy under this warranty shall be limited to the repair, refund or replacement at the supplier's sole discretion and cost, of product or components.

THIS WARRANTY APPLIES ONLY TO THE U.S. AND CANADA.

WHAT IS NOT COVERED

This warranty does not apply to damage caused by fire, accident, negligence, misuse, or use other than as stated in product instructions, improper cleaning or other circumstances not directly attributable to defects in materials and workmanship.

Natural variations occurring in wood or other materials will not be considered defects, and the supplier does not warrant the color-fastness or matching of colors, grains, or textures of such materials. This warranty does not apply to: modifications of the product, attachments to the product not approved, and products that were not installed, used, or maintained in accordance with product instructions and warnings.


Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.Hamptonbay.com.

Pre-Assembly

PLANNING ASSEMBLY

Compare all parts with the Hardware Included and Package Contents lists in this manual. If any part appears missing or damaged, do not assemble this product. Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.HamptonBay.com.



TOOLS REQUIRED

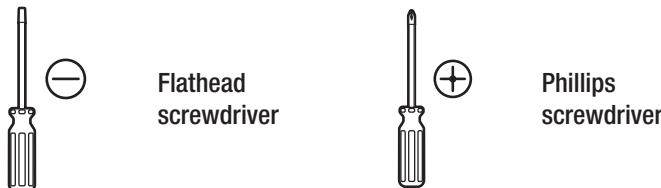

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.

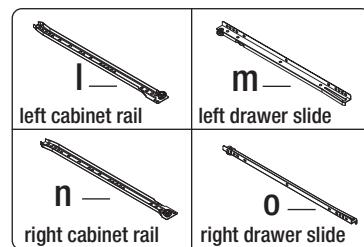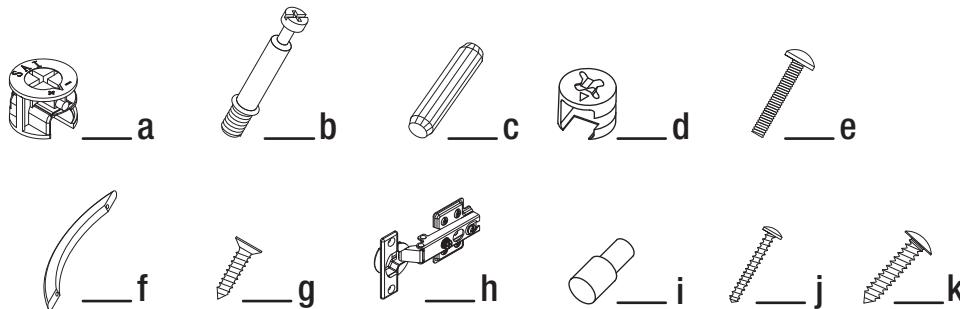

Part	Description	Quantity
a	Cam Lock	14
b	Cam Bolt	18
c	Wood Dowel	16
d	Small Cam Lock	4
e	Bolt	4
f	Knob	2
g	3.5*14 mm Screw	36
h	Hinge	4
i	Shelf Support	4
j	4*35 mm Screw	4
k	3*14 mm Screw	22
l	Left Cabinet Rail	1
m	Left Drawer Slide	1
n	Right Cabinet Rail	1
o	Right Drawer Slide	1

Pre-Assembly (continued)

PACKAGE CONTENTS

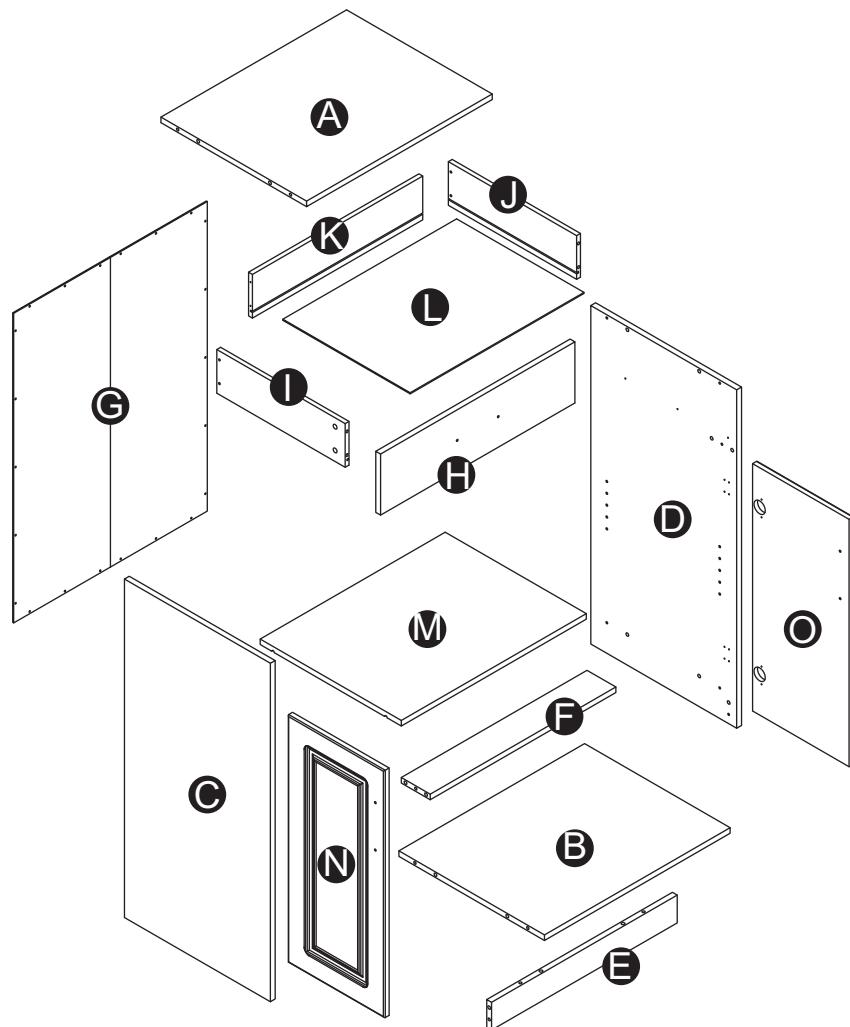


Part	Description	Quantity
A	Top	1
B	Bottom	1
C	Left Side Panel	1
D	Right Side Panel	1
E	Bottom Front Rail	1
F	Cross Bars	1
G	Back Panel	1
H	Drawer Front	1
I	Left Drawer Side	1

Part	Description	Quantity
J	Right Drawer Side	1
K	Drawer Back	1
L	Drawer Bottom	1
M	Adjustable Shelf	1
N	Left Door	1
O	Right Door	1

Assembly


1 Preparing the top , cross bars and drawer front

- Insert eight wood dowels (c) into the top (A) and cross bars (F).
- Turn four cam bolts (b) into the holes in the drawer front (H).

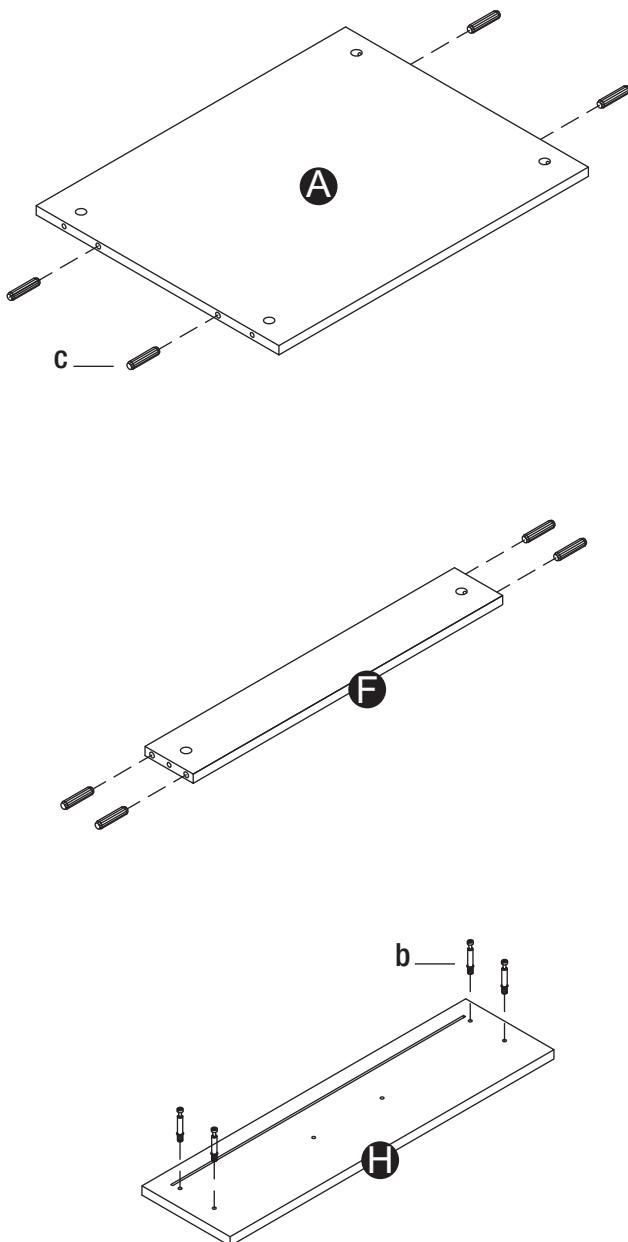

2 Assembling the bottom and bottom front rail



- Insert eight wood dowels (c) into the bottom (B) and bottom front rail (E).
- Turn two cam bolts (b) into the holes in the bottom (B).
- Connection bottom (B) and bottom front rail (E) , ensure that the wood dowels (c) and cam bolts (b) are fully inserted into the appropriate holes.
- Insert two cam locks (a) into the attached holes to the bottom front rail (E) , then turn all of the cam lock (a) clockwise until they lock into place over the cam bolts (b).

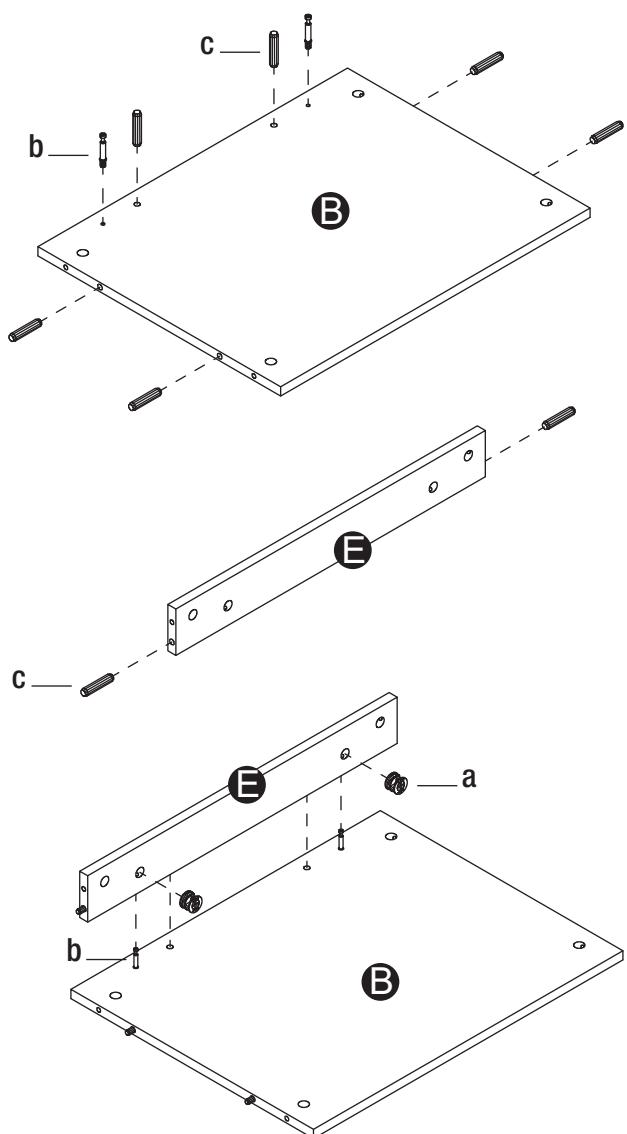

Assembly (continued)



3 Assembling the slides to the left side panel

- Insert six cam locks (b) into the appropriate holes of the left side panel (C) , Make sure the threaded side is facing down into the threaded holes , Do not overtighten the cam locks (b).
- fasten the left cabinet rail (l) to the left side panel (C) , use three screws (g) into the exact holes shown in the enlarged diagrams.

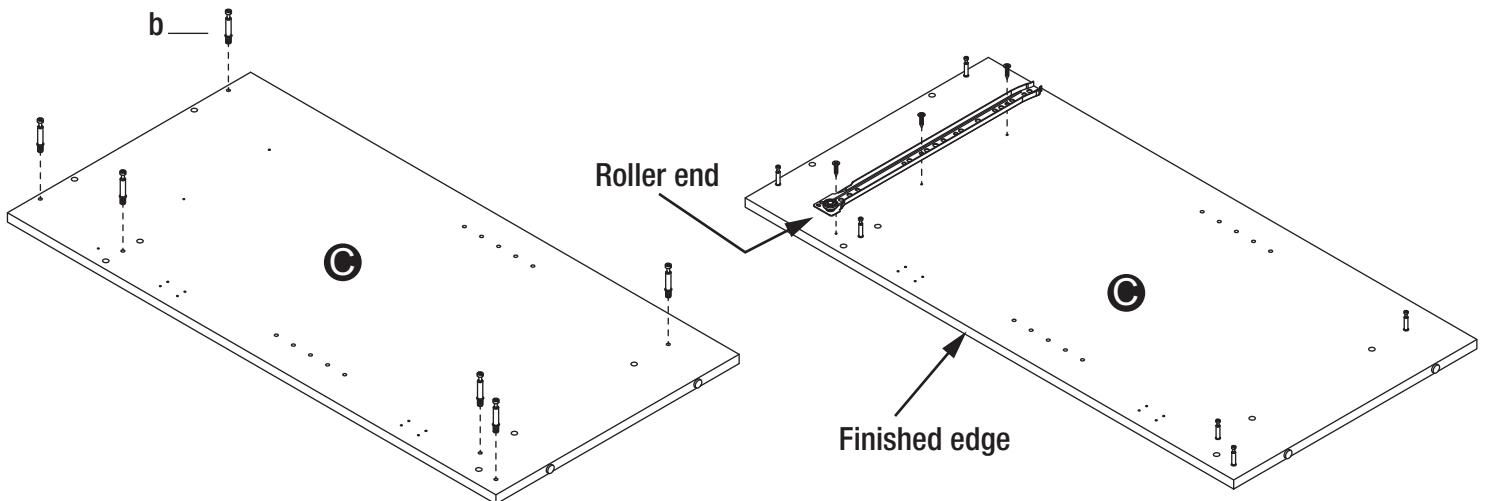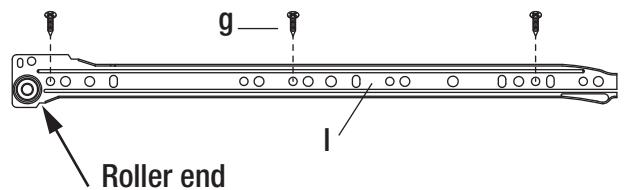

4 Assembling the slides to the right side panel


- Insert six cam locks (b) into the appropriate holes of the right side panel (D) , Make sure the threaded side is facing down into the threaded holes , Do not overtighten the cam locks (b).
- fasten the right cabinet rail (n) to the right side panel (D) , use three screws (g) into the exact holes shown in the enlarged diagrams.

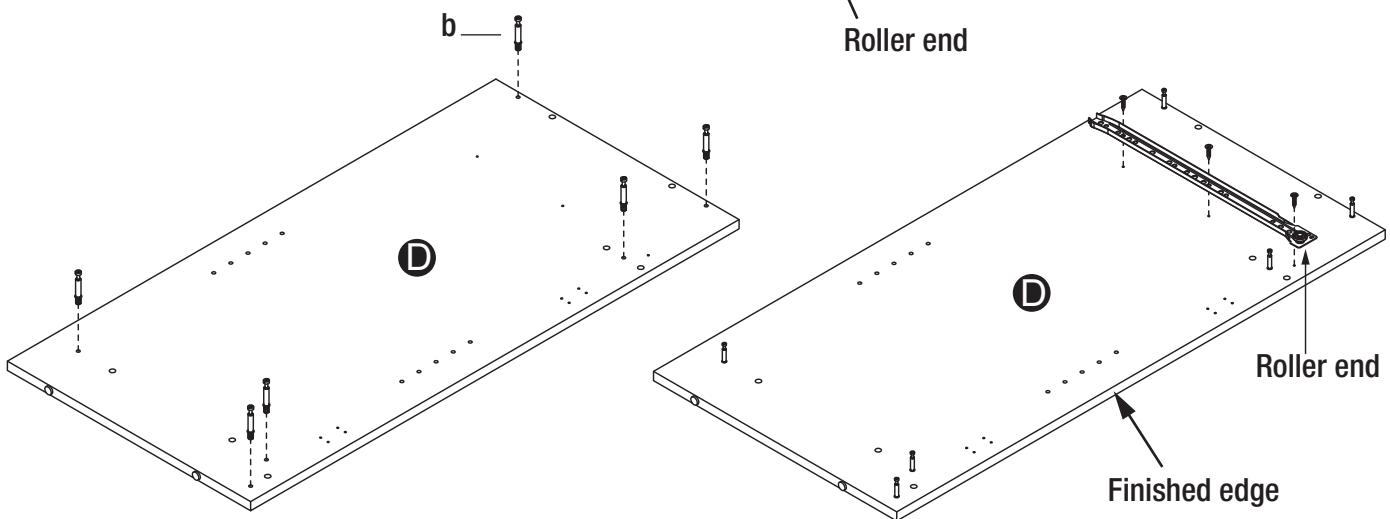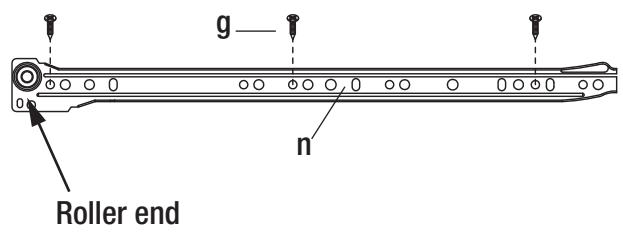

Assembly (continued)


5 Assembling the right side panel

- Connection top (A) , cross bars (F) , bottom (B) , bottom front rail (E) , and right side panel (D) , ensure that the wood dowels (c) and cam bolts (b) are fully inserted into the appropriate holes.
- Insert six cam locks (a) into the holes to the top (A) , cross bars (F) , bottom (B) , bottom front rail (E) , then turn all of the cam locks (a) clockwise until they lock into place over the cam bolts (b).

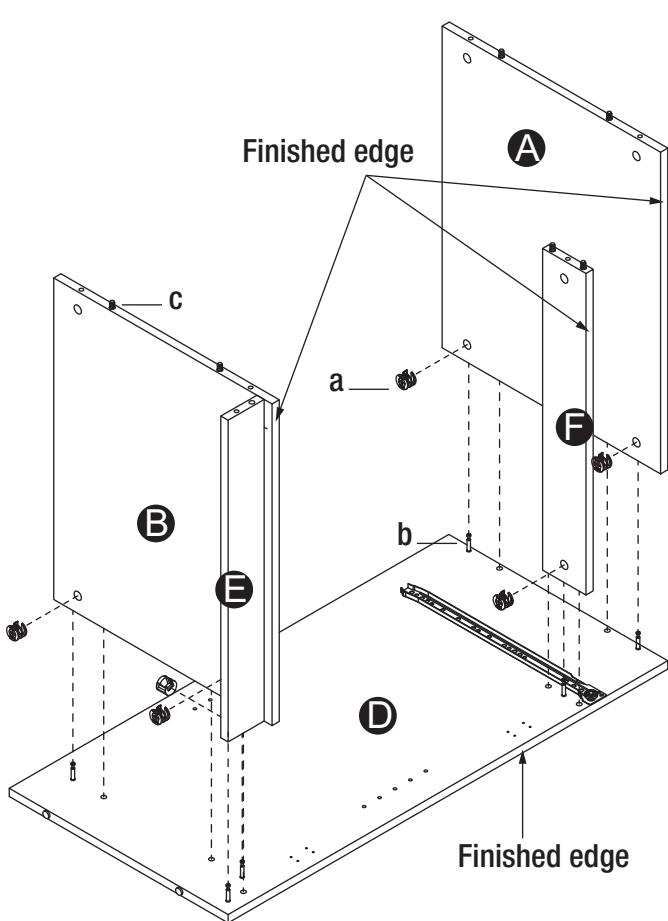

6 Assembling the left side panel

- Connection top (A) , cross bars (F) , bottom (B) , bottom front rail (E) , and left side panel (C) , ensure that the wood dowels (c) and cam bolts (b) are fully inserted into the appropriate holes.
- Insert six cam locks (a) into the holes to the top (A) , cross bars (F) , bottom (B) , bottom front rail (E) , then turn all of the cam locks (a) clockwise until they lock into place over the cam bolts (b).

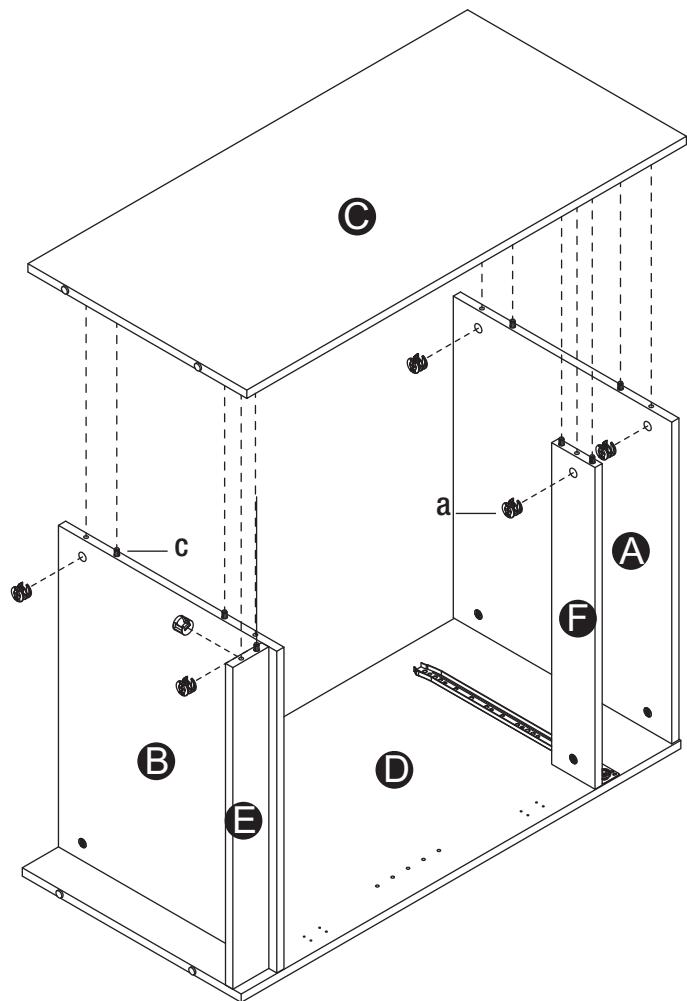


Assembly (continued)

7 Assembling the back panel




- Fasten the back panels (G) to the assembled unit using Twenty-two screws (k) , Do not over tighten the screws.

Before attaching the back panel be sure that the unit is at 90°

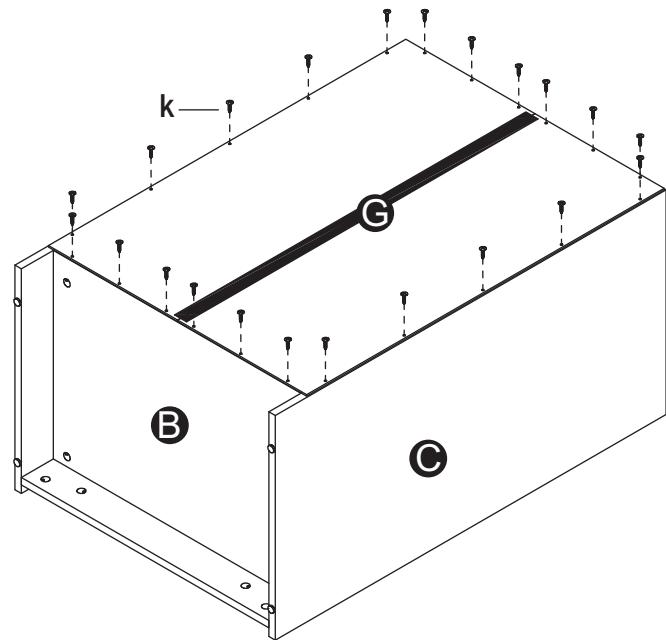

8 Assembling the drawer


- Fasten the drawer sides (I and J) to the drawer back (K) , Use four 35mm screws (j).
- Slide the drawer bottom (L) into the grooves in the drawer sides (I and J) and drawer back (K).
- Insert four small cam locks (d) into the drawer sides (I and J) , fasten the drawer front (H) to the drawer sides (I and J) , tighten four small cam lock.
- Fasten a knob (f) to the drawer front (H) , use two bolts (e).
- Fasten the left drawer slide (m) and right drawer slides (o) to the drawer side panel (I and J) , use six screws (g) through the exact holes shown in the enlarged diagram.

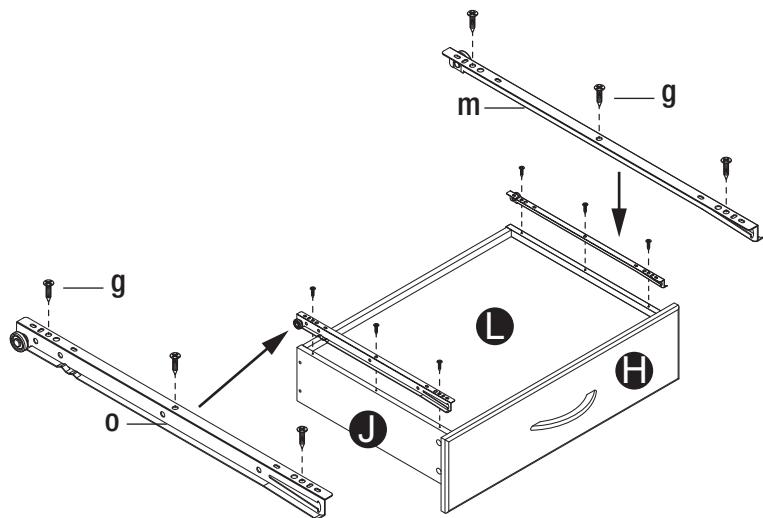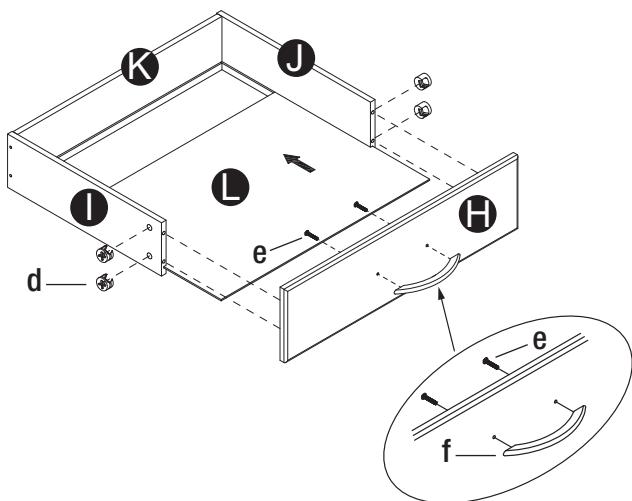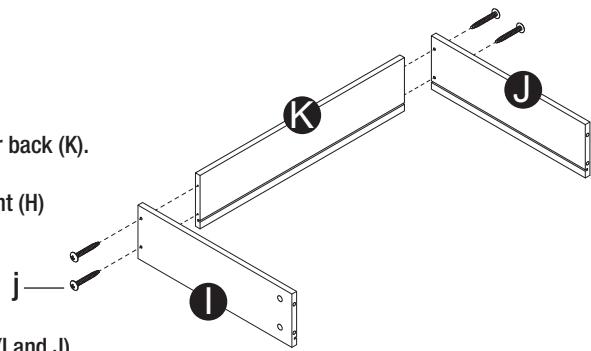

Assembly (continued)


9 Assembling the adjustable shelves and hinge

- Insert four shelf supports (i) into the desired holes the cabinets assembly and place inside the shelves (M) on top of the supports (i).
- Through four screws (g) with one hinge (h) to lock on the side panel the same assembling step for the other three hinges (h).

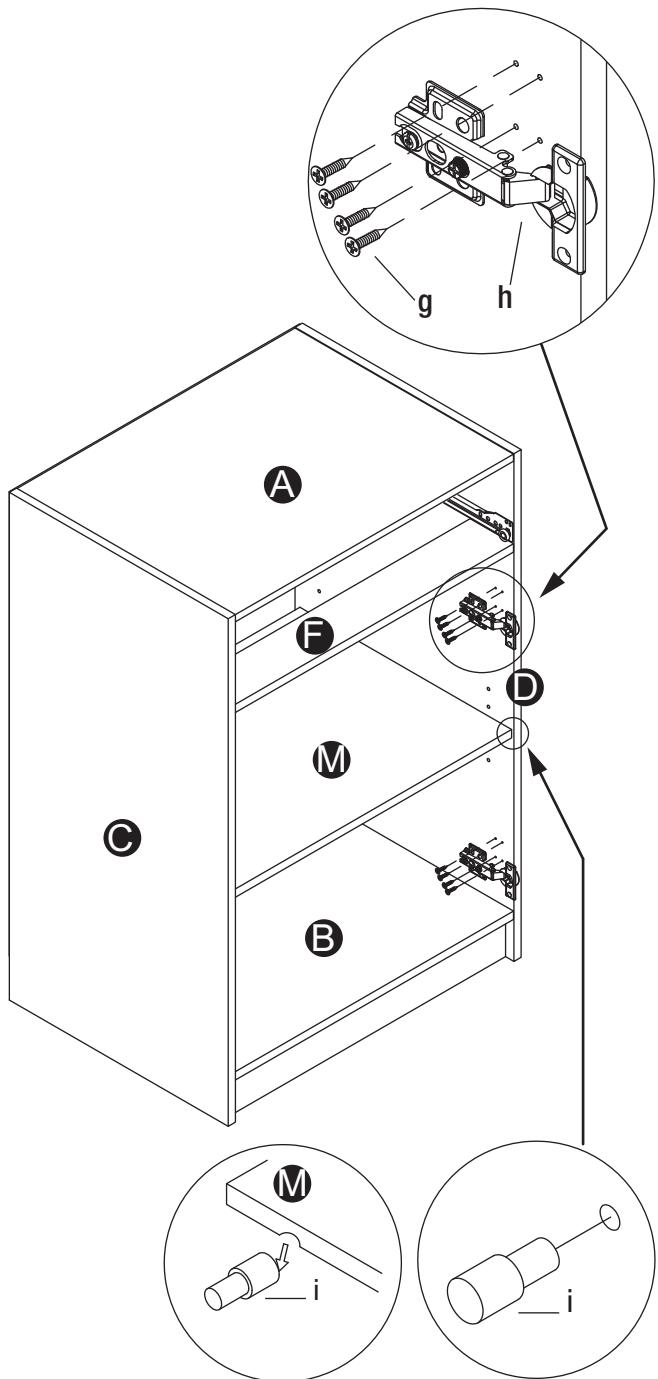


10 Assembling the door

- Through two screws (g) with one hinge (h) to lock on the door , the same assembling step for the other three hinges (h).
- Through two bolts (e) connect knob (f) with the door (N and O) , the same assembling step for the other knob (f).

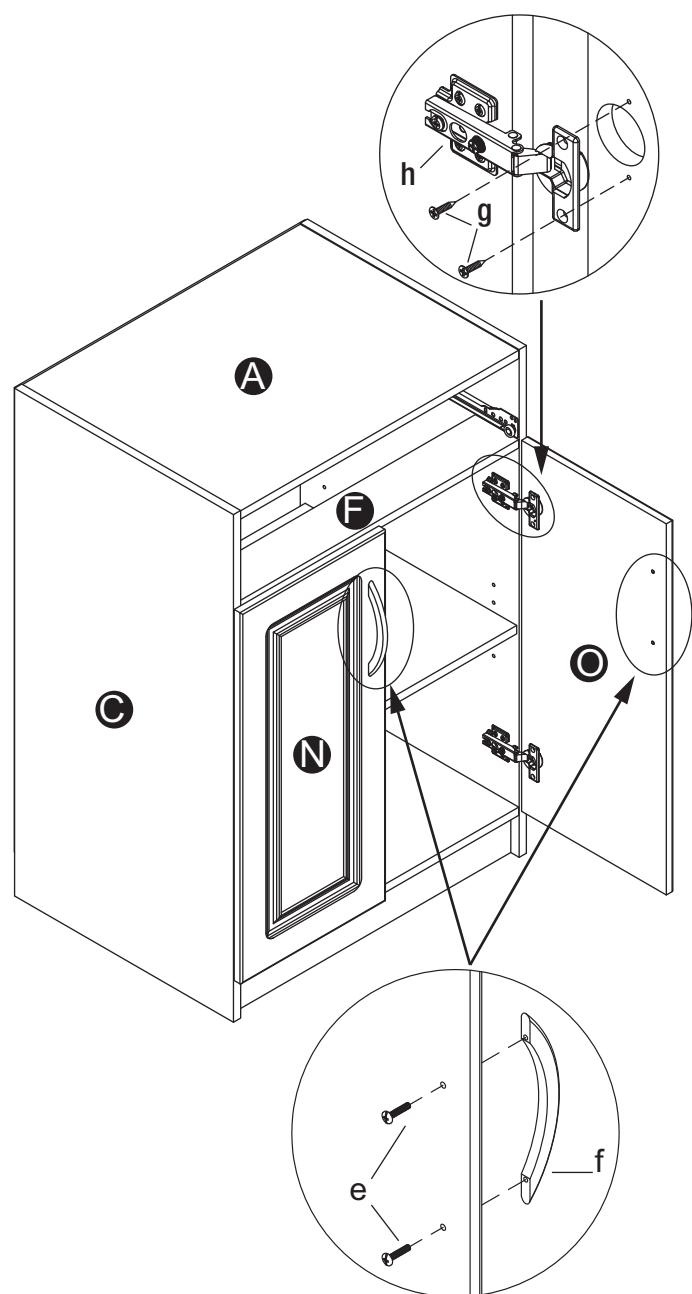

Assembly (continued)

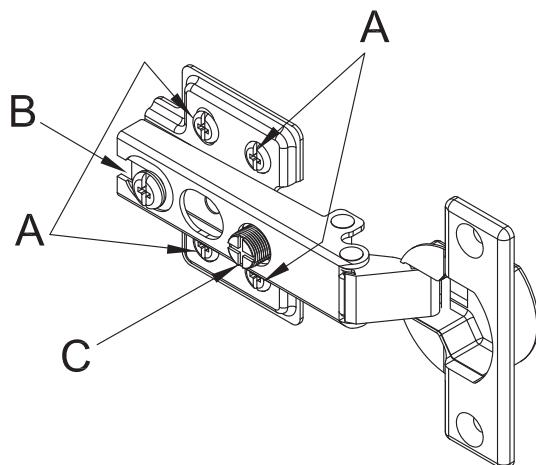


	<p>To adjust the vertical height. Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which mean and you can adjust up or down by a few mm. Then tighten back up</p>
	<p>To adjust depth. Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".</p>
	<p>To adjust side ways. Turning the screw "C" on BOTH hinges on each door.</p>

Assembly (continued)

11 poner el cajón en el armario

- To insert the remaining drawer into your unit , tip the front of the drawer down and drop the rollers on the drawer behind the rollers on the unit , lift the front of the drawer up and slide it into the unit.

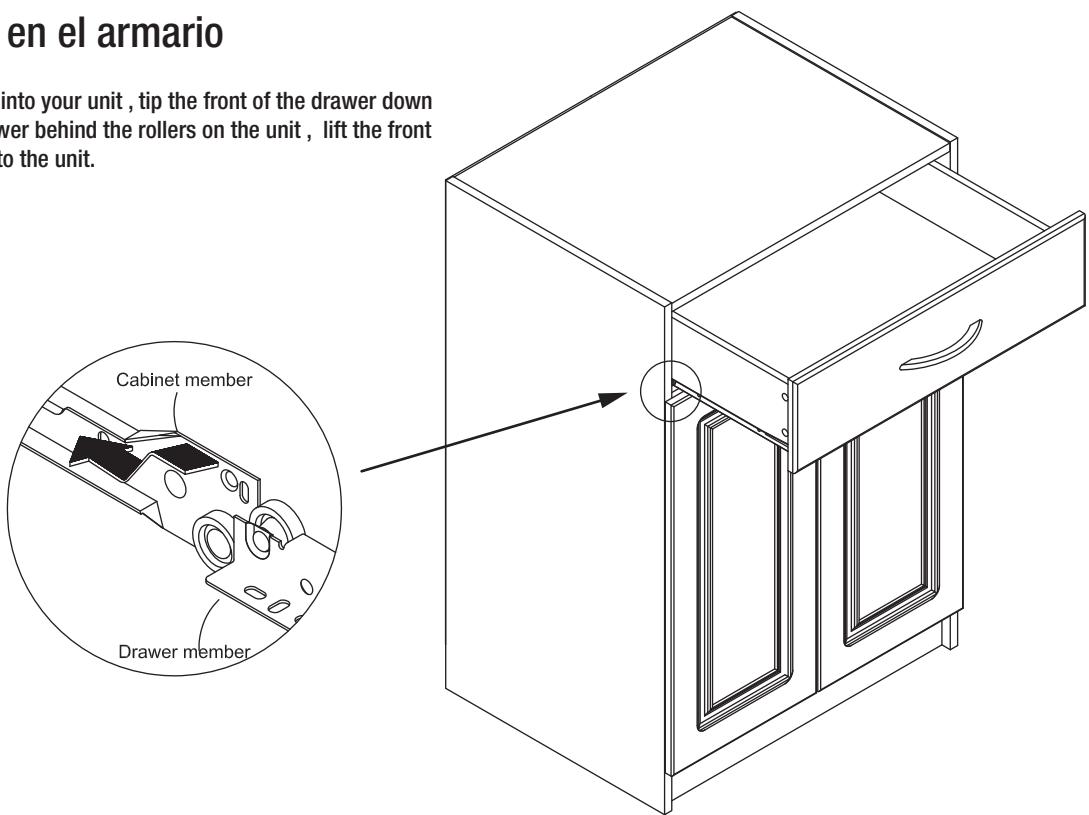


WEIGHT LIMITS

- This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.



WARNING: Please ensure that all the objects are removed before moving the assembled unit. The unit must be lifted by more than one person, not dragged or pushed. Failure to do so will cause product damage, instability, product collapse, and/or serious injury.

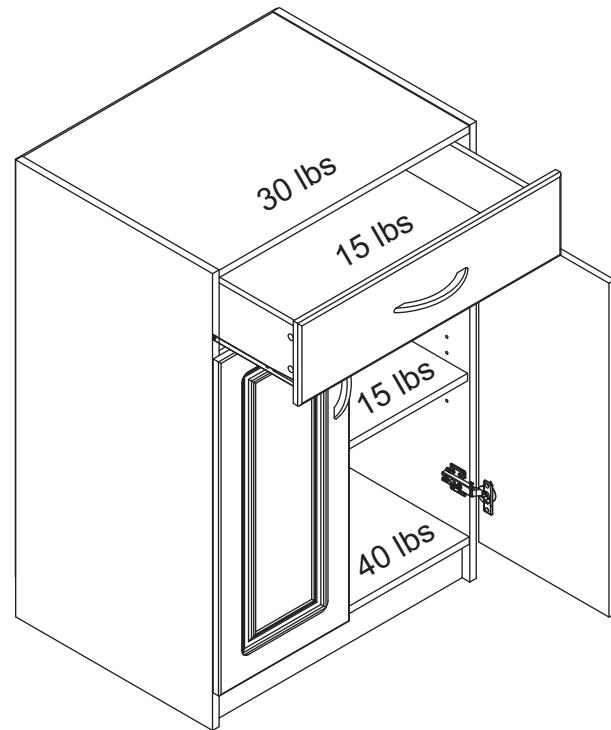



Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m.-6 p.m., EST, Monday-Friday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.